


Portlaoise College FAQ's On the Second Year Archos 97b Titanium Tablets

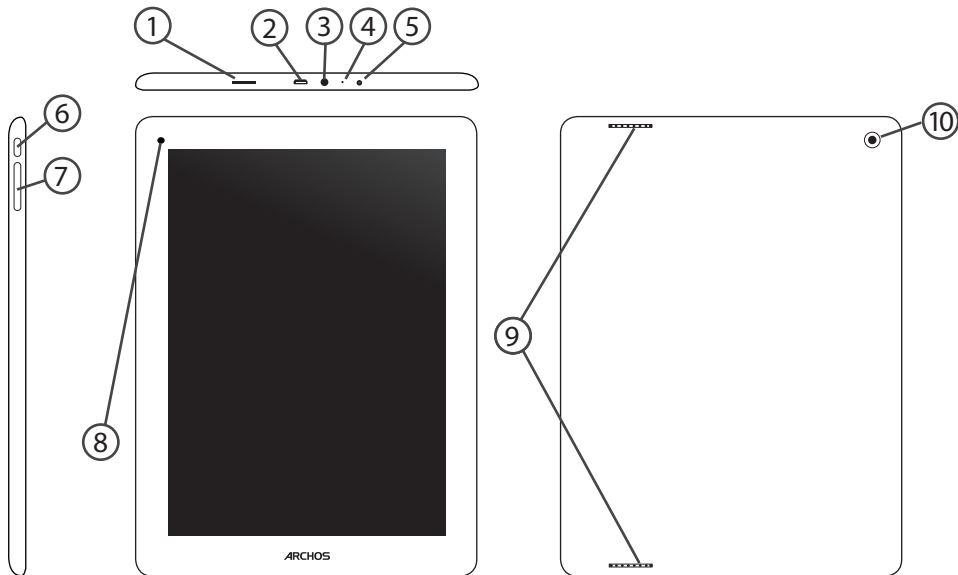

-
- ① Micro-SD card slot
 - ② Micro-USB port
 - ③ Headphone jack
 - ④ Microphone
 - ⑤ Power connector
 - ⑥ ON/OFF button
 - ⑦ Volume buttons
 - ⑧ Webcam
 - ⑨ Loudspeakers
 - ⑩ Camera

Troubleshooting

If your device is frozen:

Press the ON/OFF button for 10 seconds or use the reset button. To use the reset button, press the “pinhole reset” button by using a sharp object such as a toothpick.

If your device doesn't turn on:

1. Charge your device.
2. Press the ON/OFF button for 10 seconds or use the reset button. To use the reset button, press the “pinhole reset” button by using a sharp object such as a toothpick.

If the touchscreen doesn't function correctly:

From Settings, touch Touch-screen calibration.

If you want to extend the life of your battery:

Decrease the screen brightness and turn off the wireless connections if not in use.

If your device functioning is too slow:

Close all apps which are not currently used.

If your WiFi reception is too low:

Make sure you are not far from the WiFi hotspot.

Update the firmware of the device: <http://www.archos.com/support>.

Reset and redefine your connection parameters.

Contact your WiFi connection provider.

For Detailed Technical Support Contact:

<http://tinyurl.com/kuqnxmy>

<http://goo.gl/2kc1fX>